





IPX8

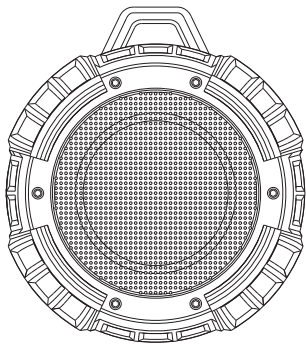

Blast Speaker BS71
User manual

3ADS71V1

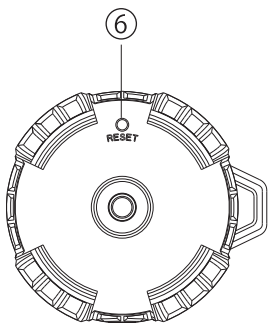


6. Reset Interface


Stab the reset interface with some kind of tiny stick to sweep all status and restart the speaker.

How to use the Speaker


The General Features

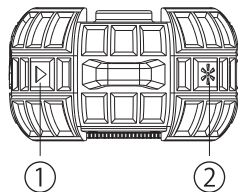

1. On/Off/Play/Pause Button/Hand-free Button
Long press this button to power on /off the device.
Short press this button to play/pause the playing music.
Short press this button to answer the incoming phone call.
2. LED Light Model Button
Press the button to change the light status.
The default model is flashing with rhythm light.
Second light mode is breath light. Press again to shut down the light.

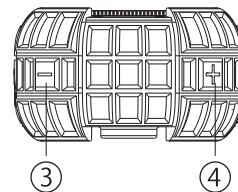

3. PREV/Volume Down Button
Short press the button to play the previous track.
Hold in the button to turn down the volume.
4. NEXT/Volume Up Button
Short press the button to play the next track.
Hold in the button to turn up the volume.

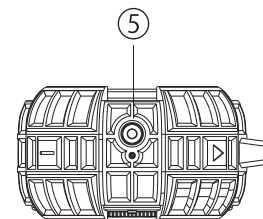

5. Bluetooth/Charging Indicator light/Line-in/charging Interface
When the device is turned on, the light turn to blue and flashes.
When the Bluetooth is connected, the light stop flashing and remain blue.
When charging the device, the red light turn on.
When the device is fully charged, the red light will go off.
Inset the USB A to 3.5mm charging cable to charging the speaker.
Inset the 3.5mm audio cable to listen to music.

Pairing Instructions

Active Bluetooth mode on mobile device and turn speaker on. Speaker will automatically enter pairing mode.

Search for the Bluetooth Speaker from your mobile device

Mobile device will display the Bluetooth Speaker as "BS71" in list of available devices. Select pair.

Follow instruction on mobile device to complete pairing. If pass-code is needed, enter "0000".

After the Mobile Device and Bluetooth Speaker connect, sound can be controlled from the Buttons "+" "-" and "▶".

If the mobile device has paired with a Bluetooth speaker previously, the match will finish automatically.

Technology Specifications

Parameters	Index
Speaker:	φ52mm 4Ω 5W
Bluetooth Ver.:	4.2
Frequency response:	150HZ~20K Hz
Sensitivity:	80±3dB
Signal to noise ratio:	≥85dB
Battery capacity:	1000mAh
Battery voltage:	3.7v
Waterproof:	IPX8
Charging time:	1.5hours
Play time:	5~6hours (70% volume level)
Size	Φ93 mm x 52 mm

Safety Information:


- Avoid contact with liquids and damp areas
- If speaker is damaged seek professional consultation, do not repair
- Do not take speaker apart to avoid electrocution
- Keep speaker away from flame
- Keep it away from children

SP


Memory is Personal



IPX8

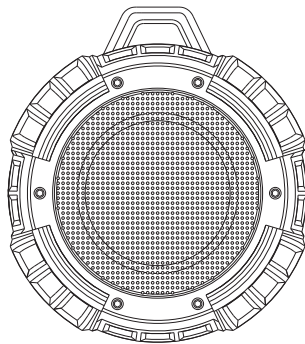

Bluetoothスピーカー Blast Speaker BS71
ユーザーマニュアル

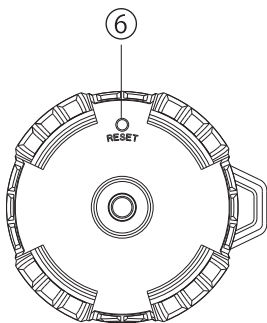


⑥リセットボタン


全ての状態をリセットして本製品を再起動する場合は、あまり鋭利でない先の細い棒で⑥のリセットボタンを押す

本製品の使い方


基本操作

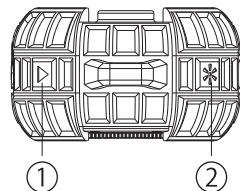

- ①ボタン <オン/オフ> <再生/一時停止> <ハンズフリー>
長押しで電源オン/オフ
短く一回押しして音楽を再生/一時停止
電話着信時に短く一回押しして電話を受ける
- ②LEDライト点滅モード切替えボタン
短く一回押しするとライトの点滅モードが切り替わる
音楽に合わせて点滅 (初期設定) → 一定間隔で点滅
→ 消灯 → 最初に戻る

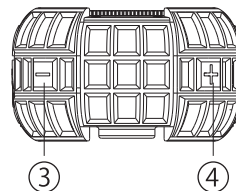

- ③ボタン <曲戻り> <音量を下げる>
短く一回押しして曲戻り
長押しで音量を下げる
- ④ボタン <曲送り> <音量を上げる>
短く一回押しして曲送り
長押しで音量を上げる

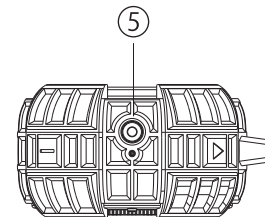

- ⑤LEDランプ <Bluetooth/充電>
/入力端子 <充電・音声入力>
電源がオンになると⑤のLEDランプが青色に点滅
Bluetoothに接続されると⑤のLEDランプが青色の点滅から点灯に変化
本製品の充電中は⑤のLEDランプが赤色に点灯し、満充電になると緑色の点灯に変化
⑤の端子に付属の3.5mm + USBケーブルを使用して本製品を充電
音声入力で音楽を聴く場合は、⑤の端子に付属の3.5mm + 3.5mmオーディオケーブルを使用

ペアリング方法

1. スマートフォンなどのモバイル機器の設定画面でBluetooth機能をオンにしてから、本製品の電源をオンにすると、本製品は自動的にペアリングモードに入ります。
2. モバイル機器のBluetoothデバイスリストから「BS71」を選択します。
3. ペアリングを完了するには、スマートフォンの指示に従ってください。もしパスワードが必要な場合は「0000」を入力してください。
4. スマートフォンと本製品を接続した後は、本マニュアルの「基本操作」を参照してご使用ください。
5. 一度ペアリングの初期設定を行っている場合は、本製品の電源をオンすると自動的にスマートフォンと再接続されます。

製品仕様

スピーカー:	φ52mm 4Ω 5W
Bluetoothバージョン:	Ver. 4.2
Bluetoothプロファイル:	A2DP/AVRCP/HFP
再生周波数帯域:	150Hz-20KHz
感度:	80±3 dB
SN比:	≥85 dB
バッテリー容量:	1000mAh
電圧:	3.7V
防水性能:	IPX8
充電時間:	約1.5時間
連続再生時間:	約5-6時間 (音量レベルが70%の場合)
サイズ:	φ93mm x 52mm

同梱品

1. スピーカー本体 x 1
2. 3.5mm + USB充電用ケーブル x 2
3. 3.5mm + 3.5mmオーディオケーブル x 1
4. 吸盤付きホルダー x 1
5. ハンドル固定用ホルダー x 1
6. ユーザーマニュアル x 1

保証期間: ご購入後1年間

正しくお使いいただくための注意事項

1. 本製品をお使いになる前に本書をよくお読みいただき、正しくお使いください。また、本書は大切に保管しておいてください。
2. 初めて本製品をお使いになる場合は、本製品を満充電にしてからお使いください。本製品のバッテリー残量が少なく安定して動作しない可能性があります。
3. 本製品を2週間以上使用しない場合、定期的に充電してください。
4. スマートフォンと本製品が未接続の場合、スマートフォンと本製品がペアリングされていることを確認してください。万一、長時間スマートフォンと本製品が接続されない場合は、ペアリングが解除されますので、ペアリングの再接続をおこなう必要があります。また、本製品やスマートフォンで何かエラーが発生した場合は、スマートフォンを再起動する、もしくは、本製品を初期化設定してください。
5. 充電中に不適切な操作やその他の原因で接触不良が発生した場合、充電が不完全になることがあります。充電用USBを正しく接続し、本製品を安定した状態で充電してください。

警告

1. 破損や危険、感電を避けるために、本製品を分解したり改造したりしないでください。
2. 0℃未満や45℃を超える極端な温度での保管は避けてください。
3. 子供や動物の目の近くで使用しないでください。
4. 雷雨がおきている時は、不規則な動作や感電の危険を避けるために本製品の使用はしないでください。
5. 本製品の汚れをふき取るために、化学薬品や強力な洗剤は使用しないでください。
6. 本製品は乾燥した状態で保管してください。

